
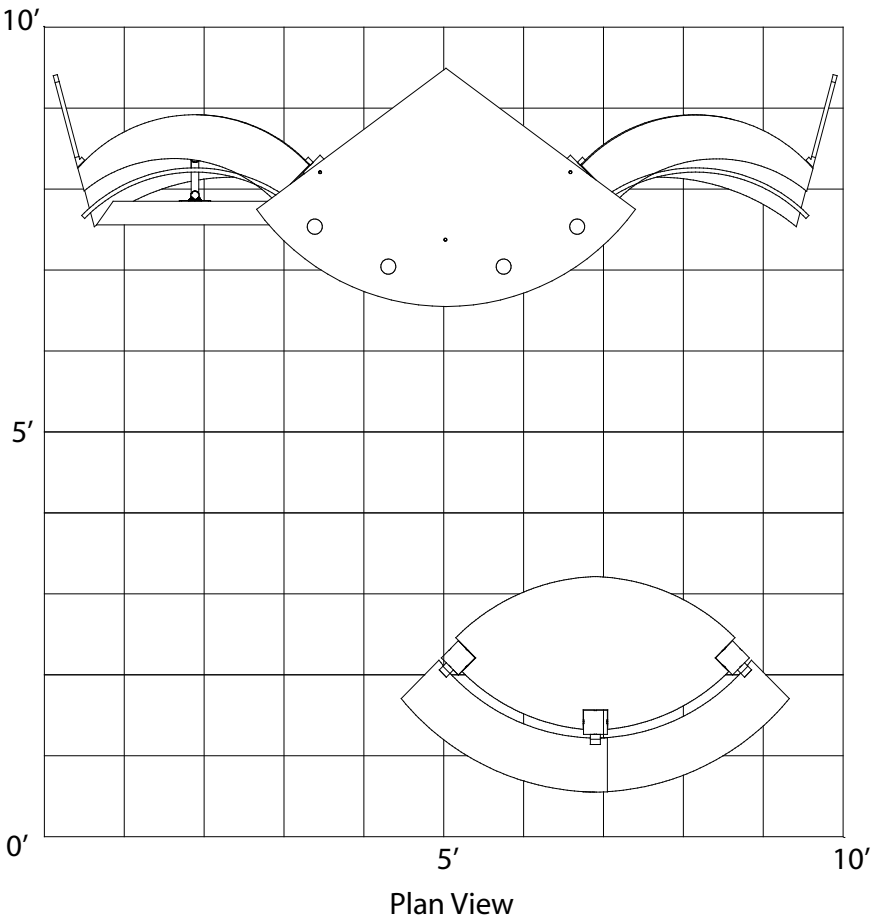


euro It | *HYBRIDS*

866.652.2100

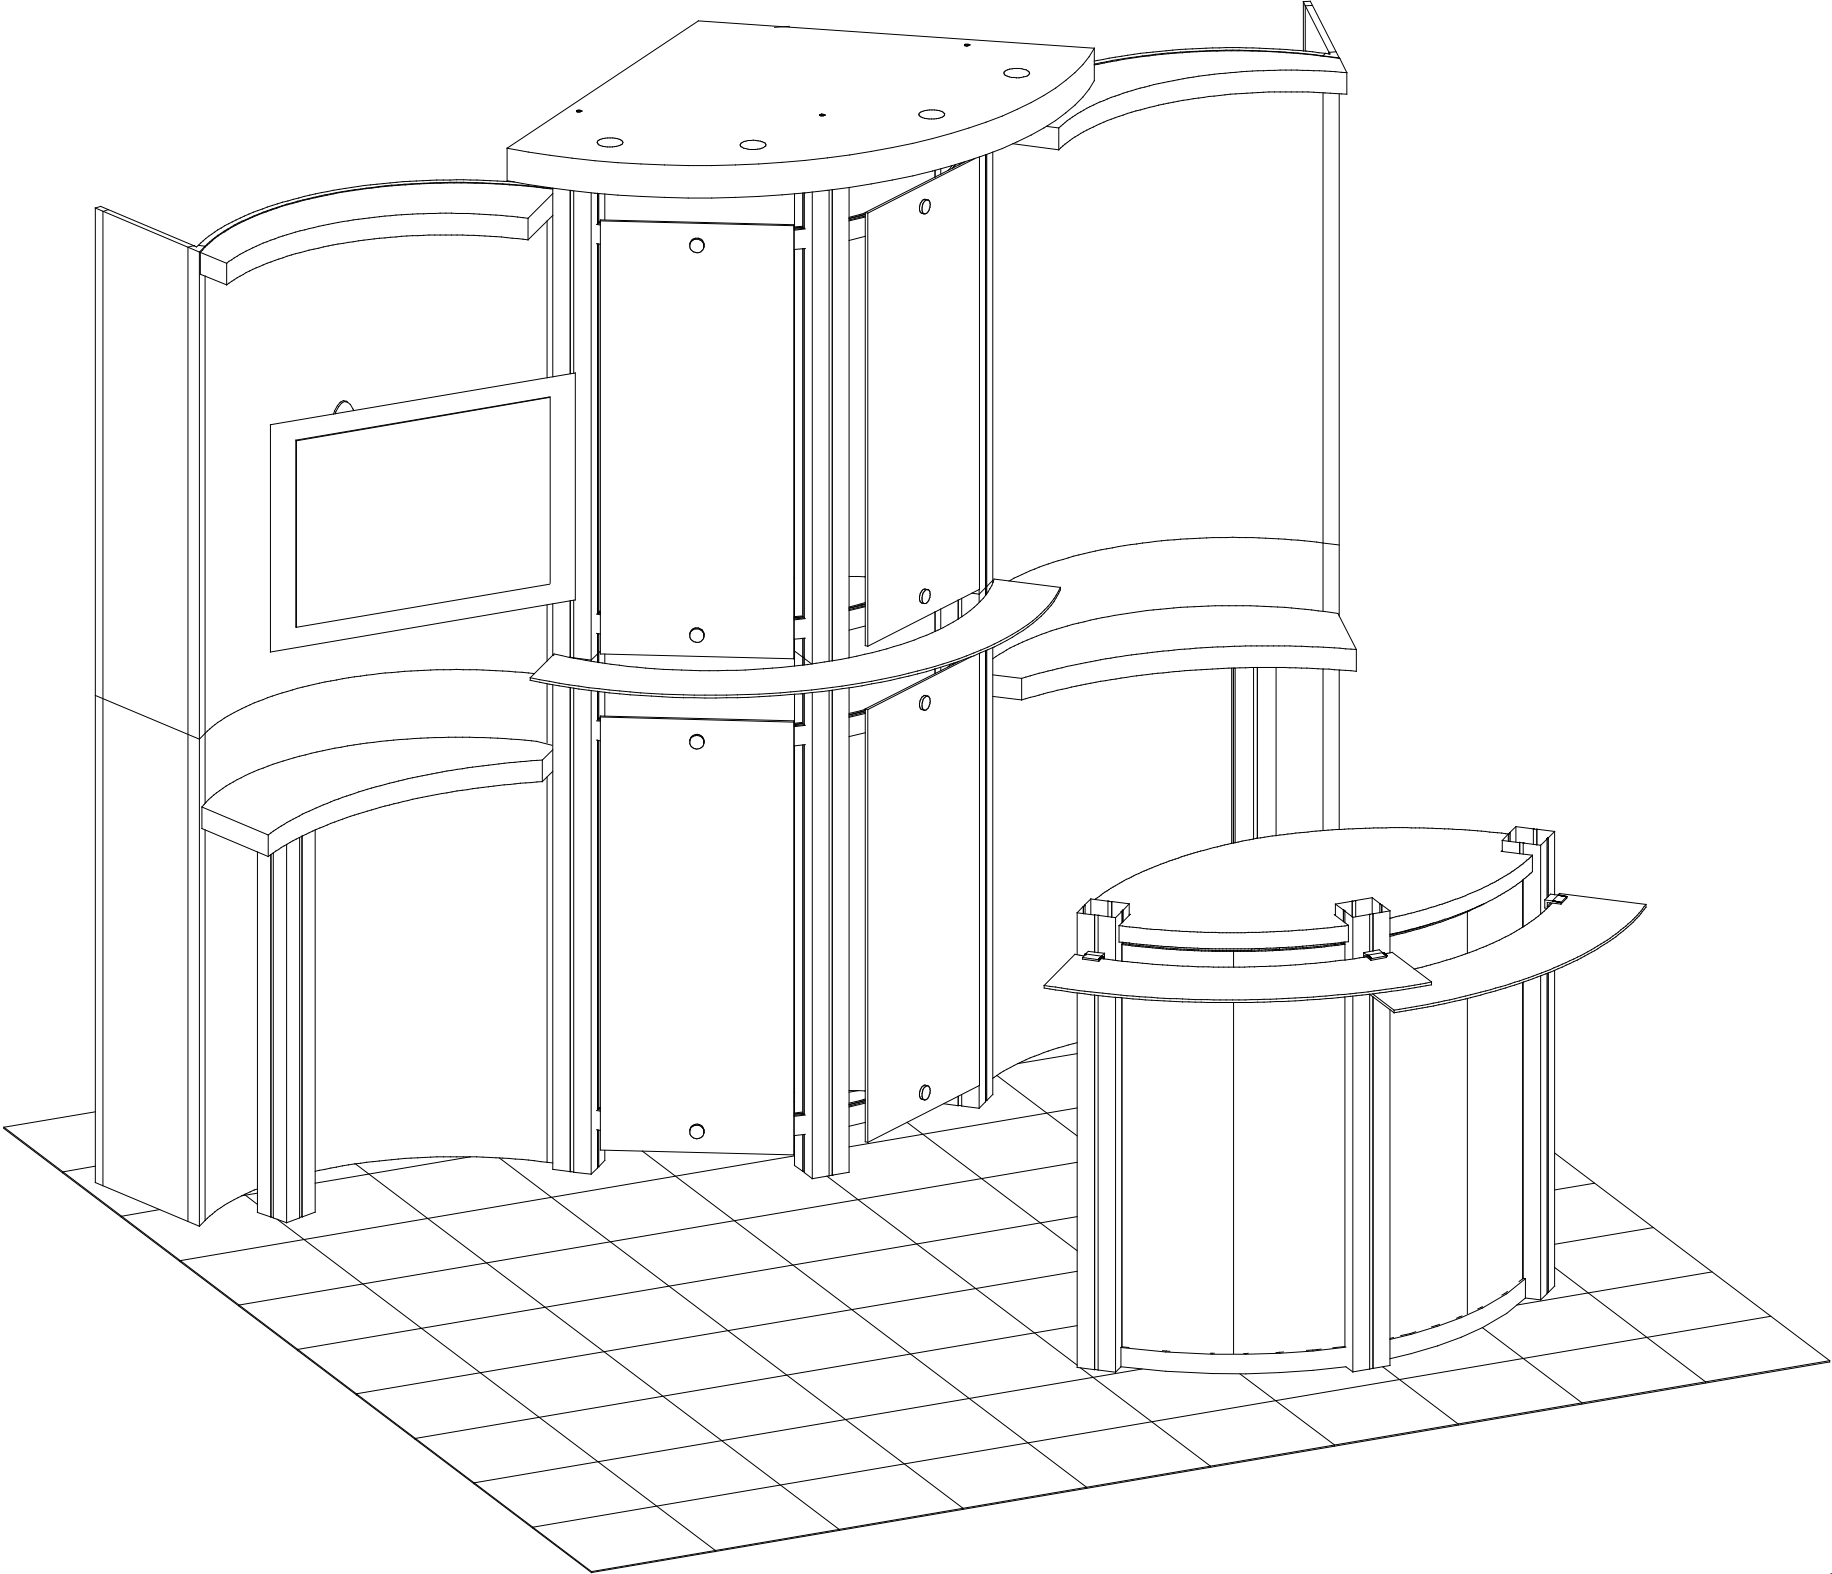

euro lt | HYBRIDS

Euro LT Hybrids General Setup Instructions

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.


Cleaning and Packing Your Display

- 1) When cleaning laminate countertops or panels use mild cleansers and a soft material such as cotton.
- 2) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 3) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

Level 1 = Blue
Level 2 = Red
Level 3 = Green
Level 4 = Black

Color Code


The top clip is color coded to distinguish the level. The color coded clip also contains the numbered label

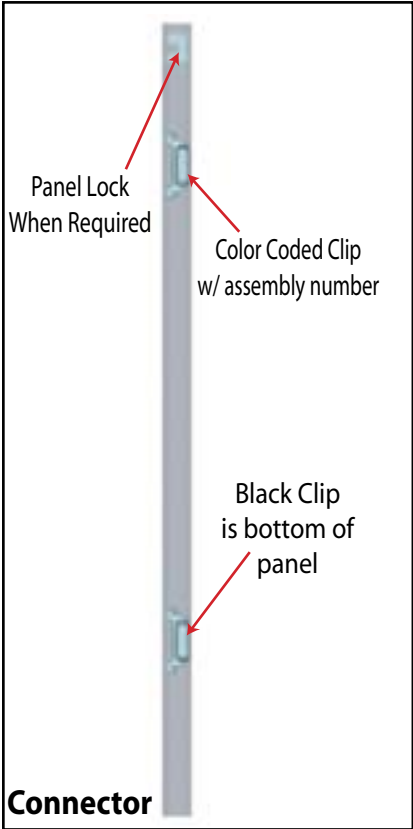


Each component has 2 clips, the lower clip is ALWAYS black. .




Components connect together by aligning them and sliding downward connecting clips together.

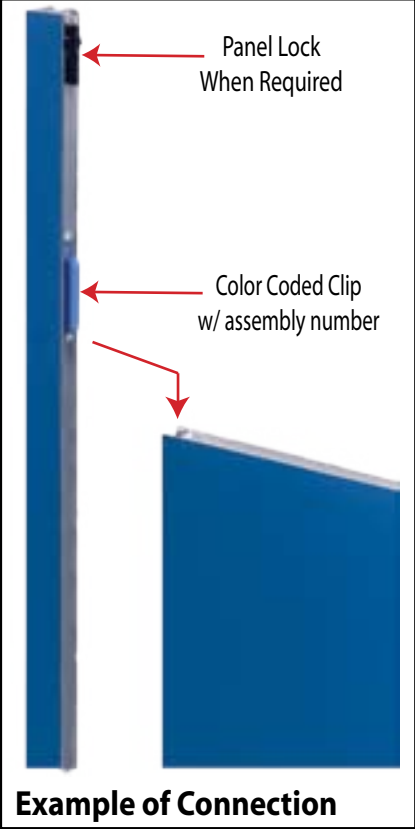

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

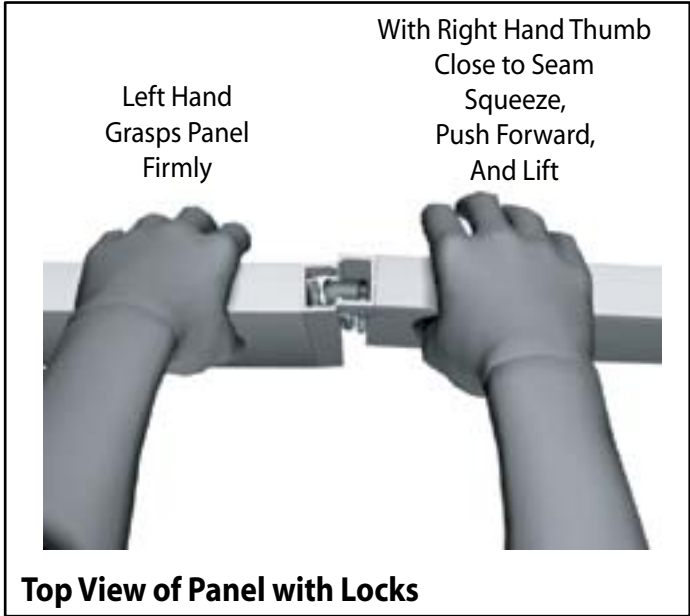




The first level of components contains panel locks that are located at the top of the panel for extra stability and a seamless connection. When dis-assembling panels, twist top connection slightly and lift right panel upward.

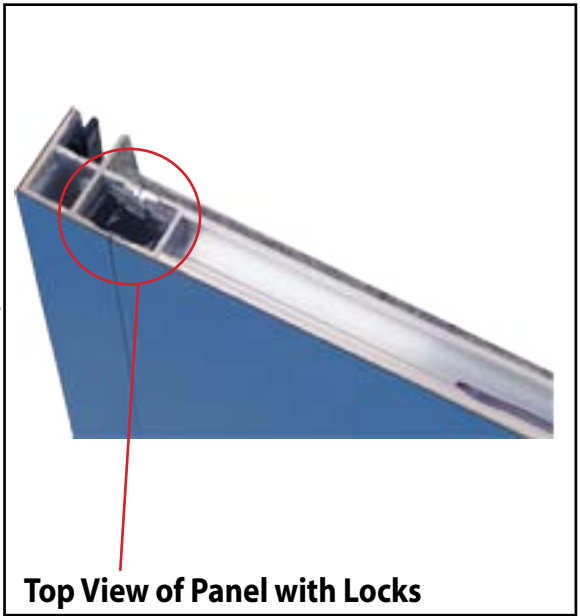

866.652.2100

| Item Number | Description |
|-------------|----------------------------------|
| 1 | 45"h End Cap |
| 2 | 11.5"w x 45"h Flat Panel |
| 3 | 45"h 120° Connector |
| 4 | 45"h Curved Panel |
| 5/6 | 47.5"h Square Vertical Extrusion |
| 6 | 47.5"h Curved Panel |
| 7/8 | 47.5"h Square Vertical Extrusion |
| 8 | 45"h Curved Panel |
| 9 | 45"h 120° Connector |
| 10 | 11.5"w x 45"h Flat Panel |
| 11 | 45"h End Cap |




- Steps:
- 1) Connect Vertical Extrusions 5 to 6 and 7 to 8.
 - 2) Connect panels together in numerical order attaching to vertical extrusions as shown in illustrations.

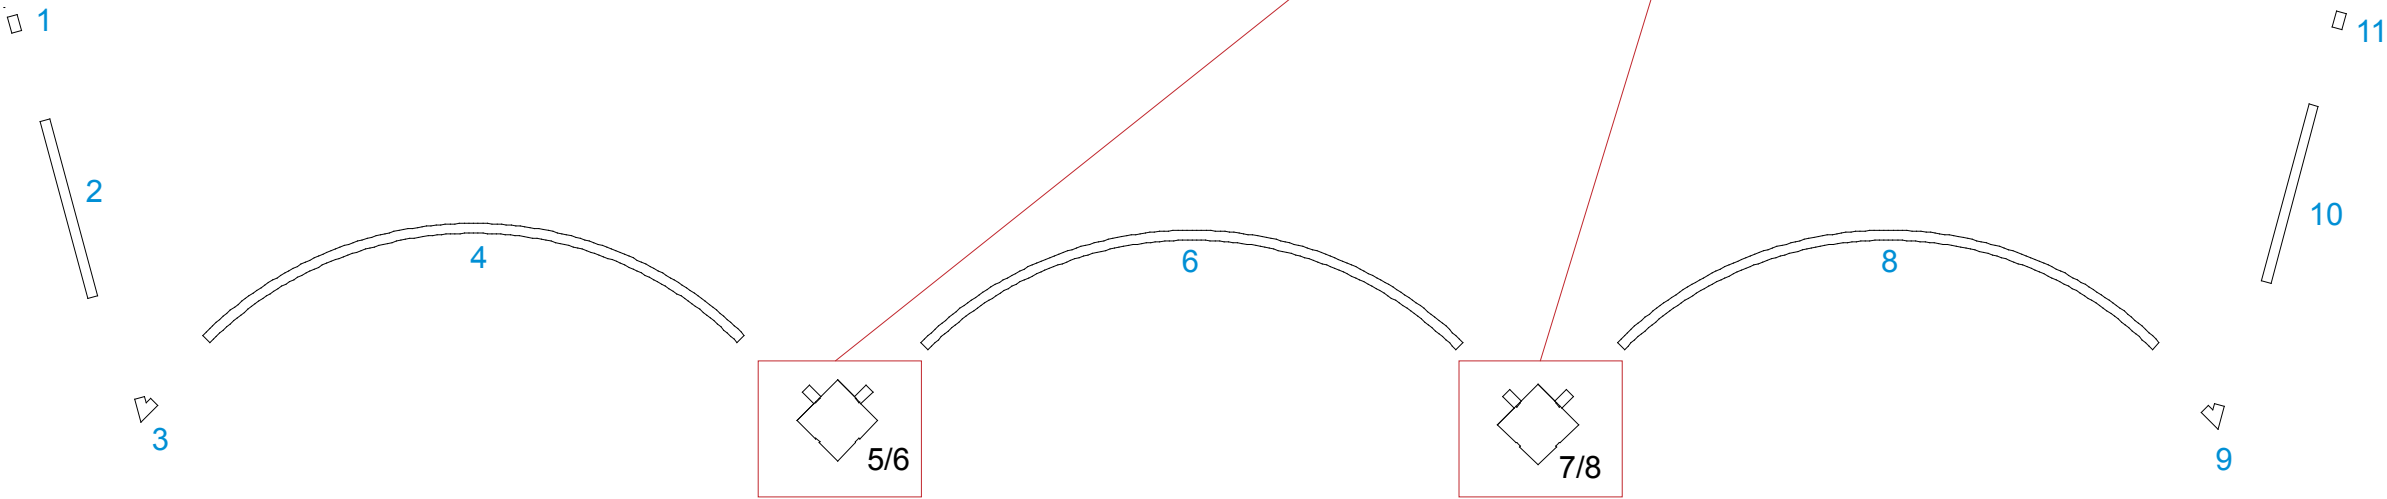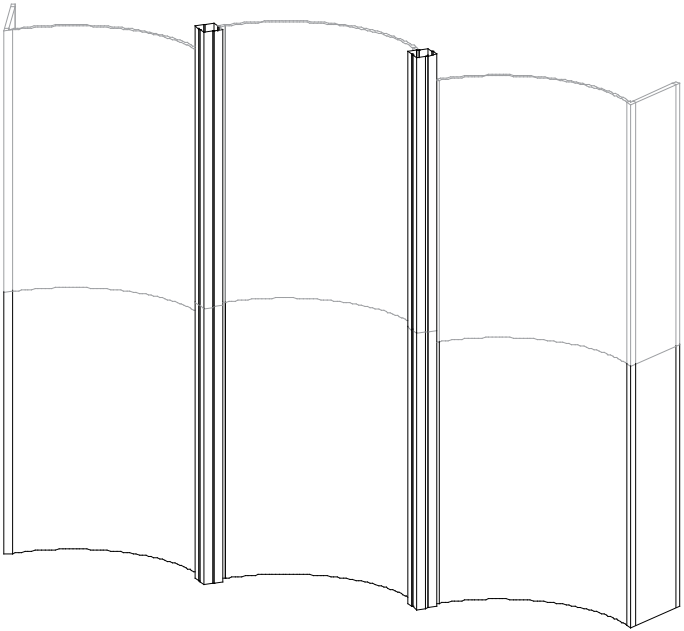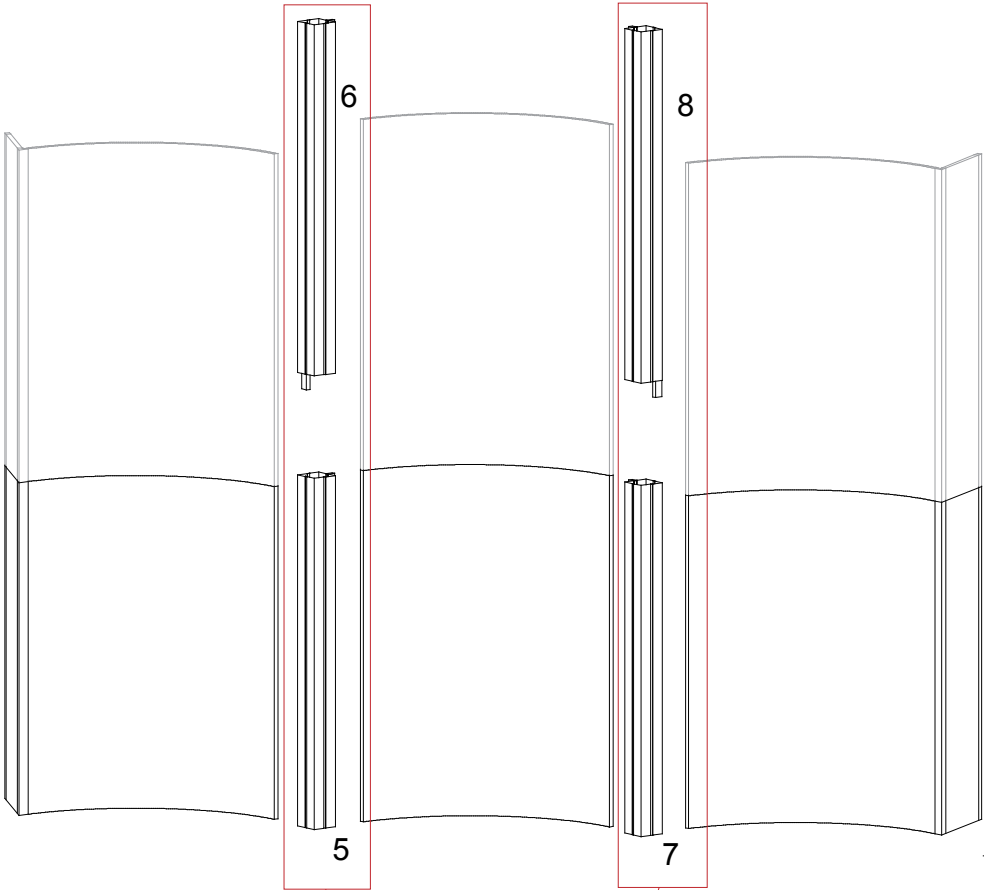

866.652.2100

| Item Number | Description |
|-------------|----------------------------------|
| 1 | 45"h End Cap |
| 2 | 11.5"w x 45"h Flat Panel |
| 3 | 45"h 120° Connector |
| 4 | 45"h Curved Panel |
| 5/6 | 47.5"h Square Vertical Extrusion |
| 6 | 47.5"h Curved Panel |
| 7/8 | 47.5"h Square Vertical Extrusion |
| 8 | 45"h Curved Panel |
| 9 | 45"h 120° Connector |
| 10 | 11.5"w x 45"h Flat Panel |
| 11 | 45"h End Cap |


- Steps:
- 1) Connect Vertical Extrusions 5 to 6 and 7 to 8.
 - 2) Connect panels together in numerical order attaching to vertical extrusions as shown in illustrations.

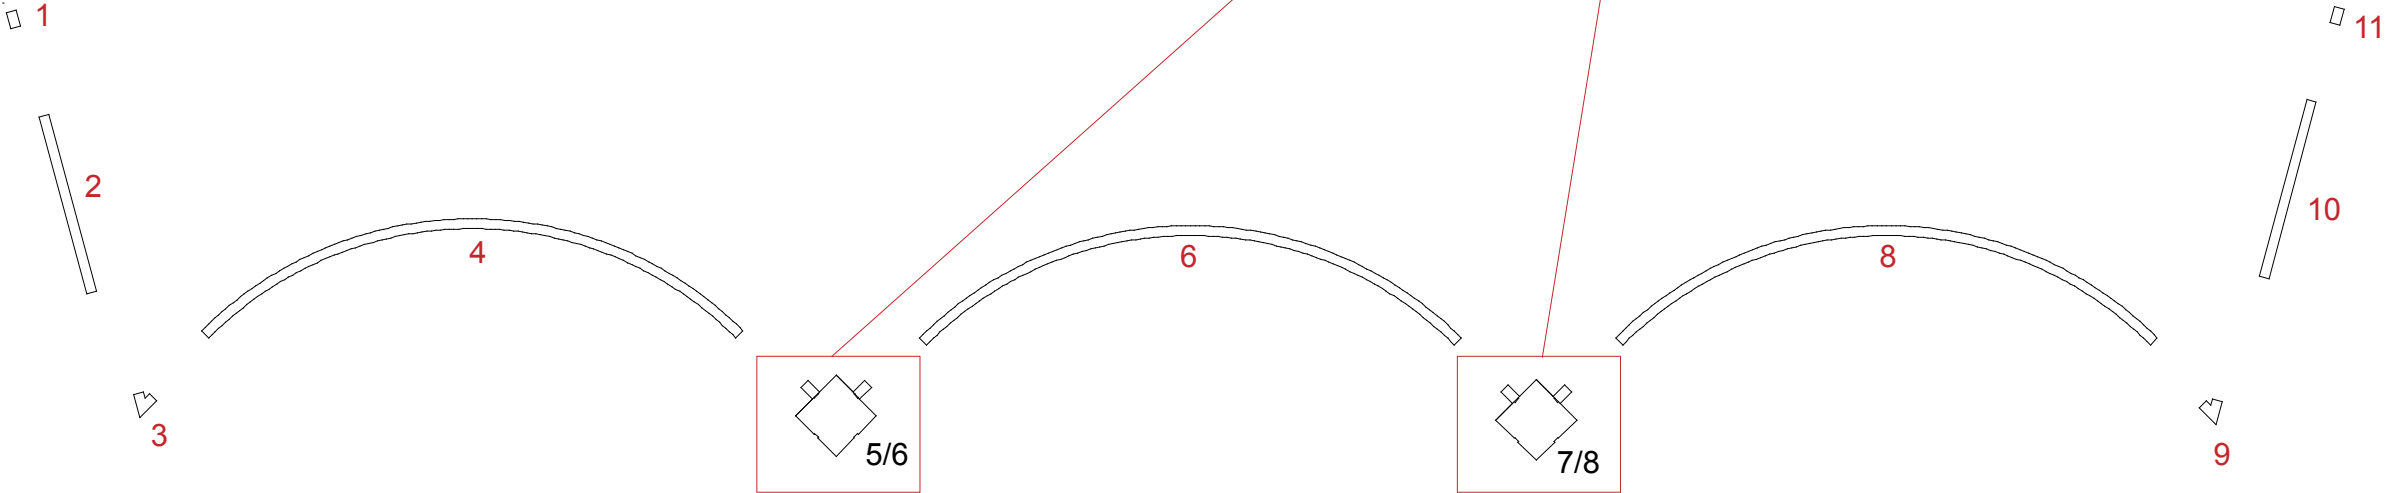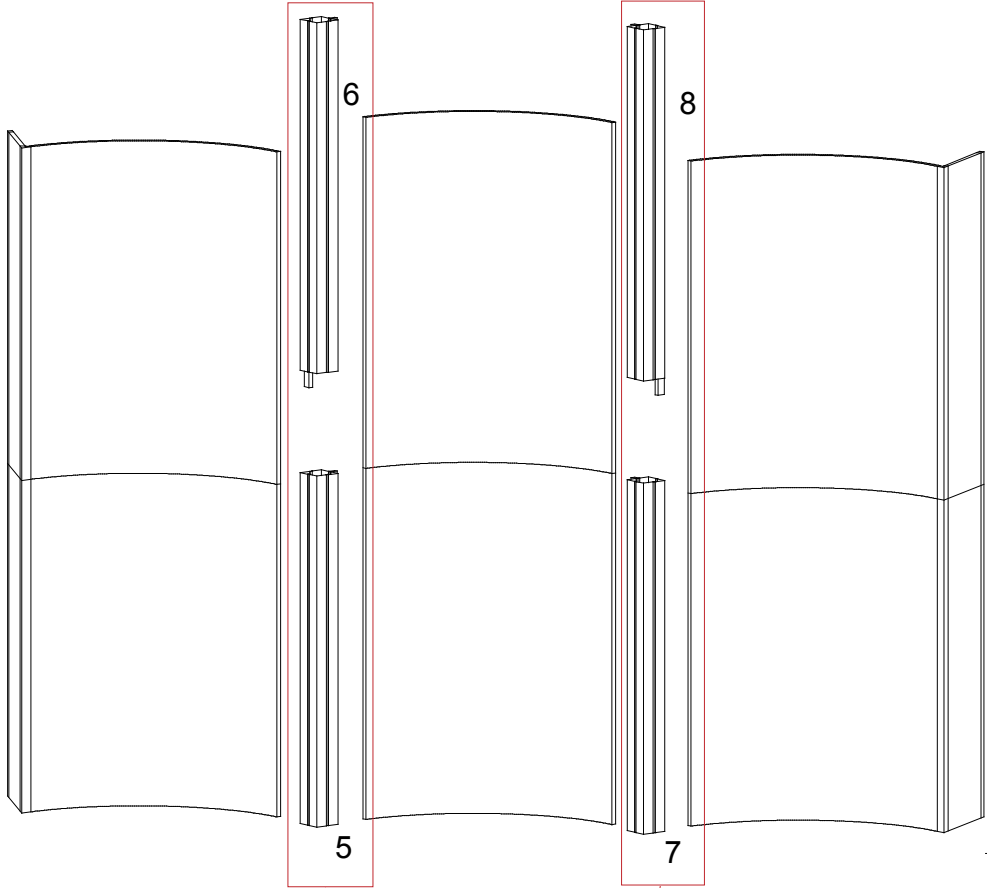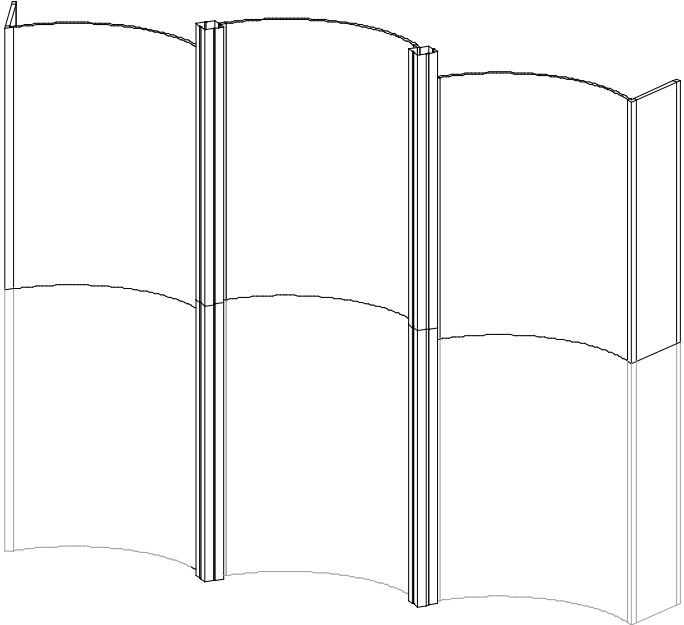

866.652.2100


| Part Number | Qty for Step | Description |
|-------------|--------------|---------------------------------|
| 9 | 1 | 47.5"h Lower Vertical Extrusion |
| 10 | 1 | 47.5"h Upper Vertical Extrusion |
| 11 | 2 | 38"h Vertical Extrusion |
| 12 | 4 | Curved Horizontal |
| 13 | 4 | Curved Horizontal |

- Steps**
- 1) Attach vertical extrusion 9 to vertical extrusion 10.
 - 2) Attach curved horizontal extrusions to vertical extrusions 9/10 and verticals 5/6, 7/8 from previous pages.
 - 3) Attach vertical extrusions 11 to counter top shown on next page.

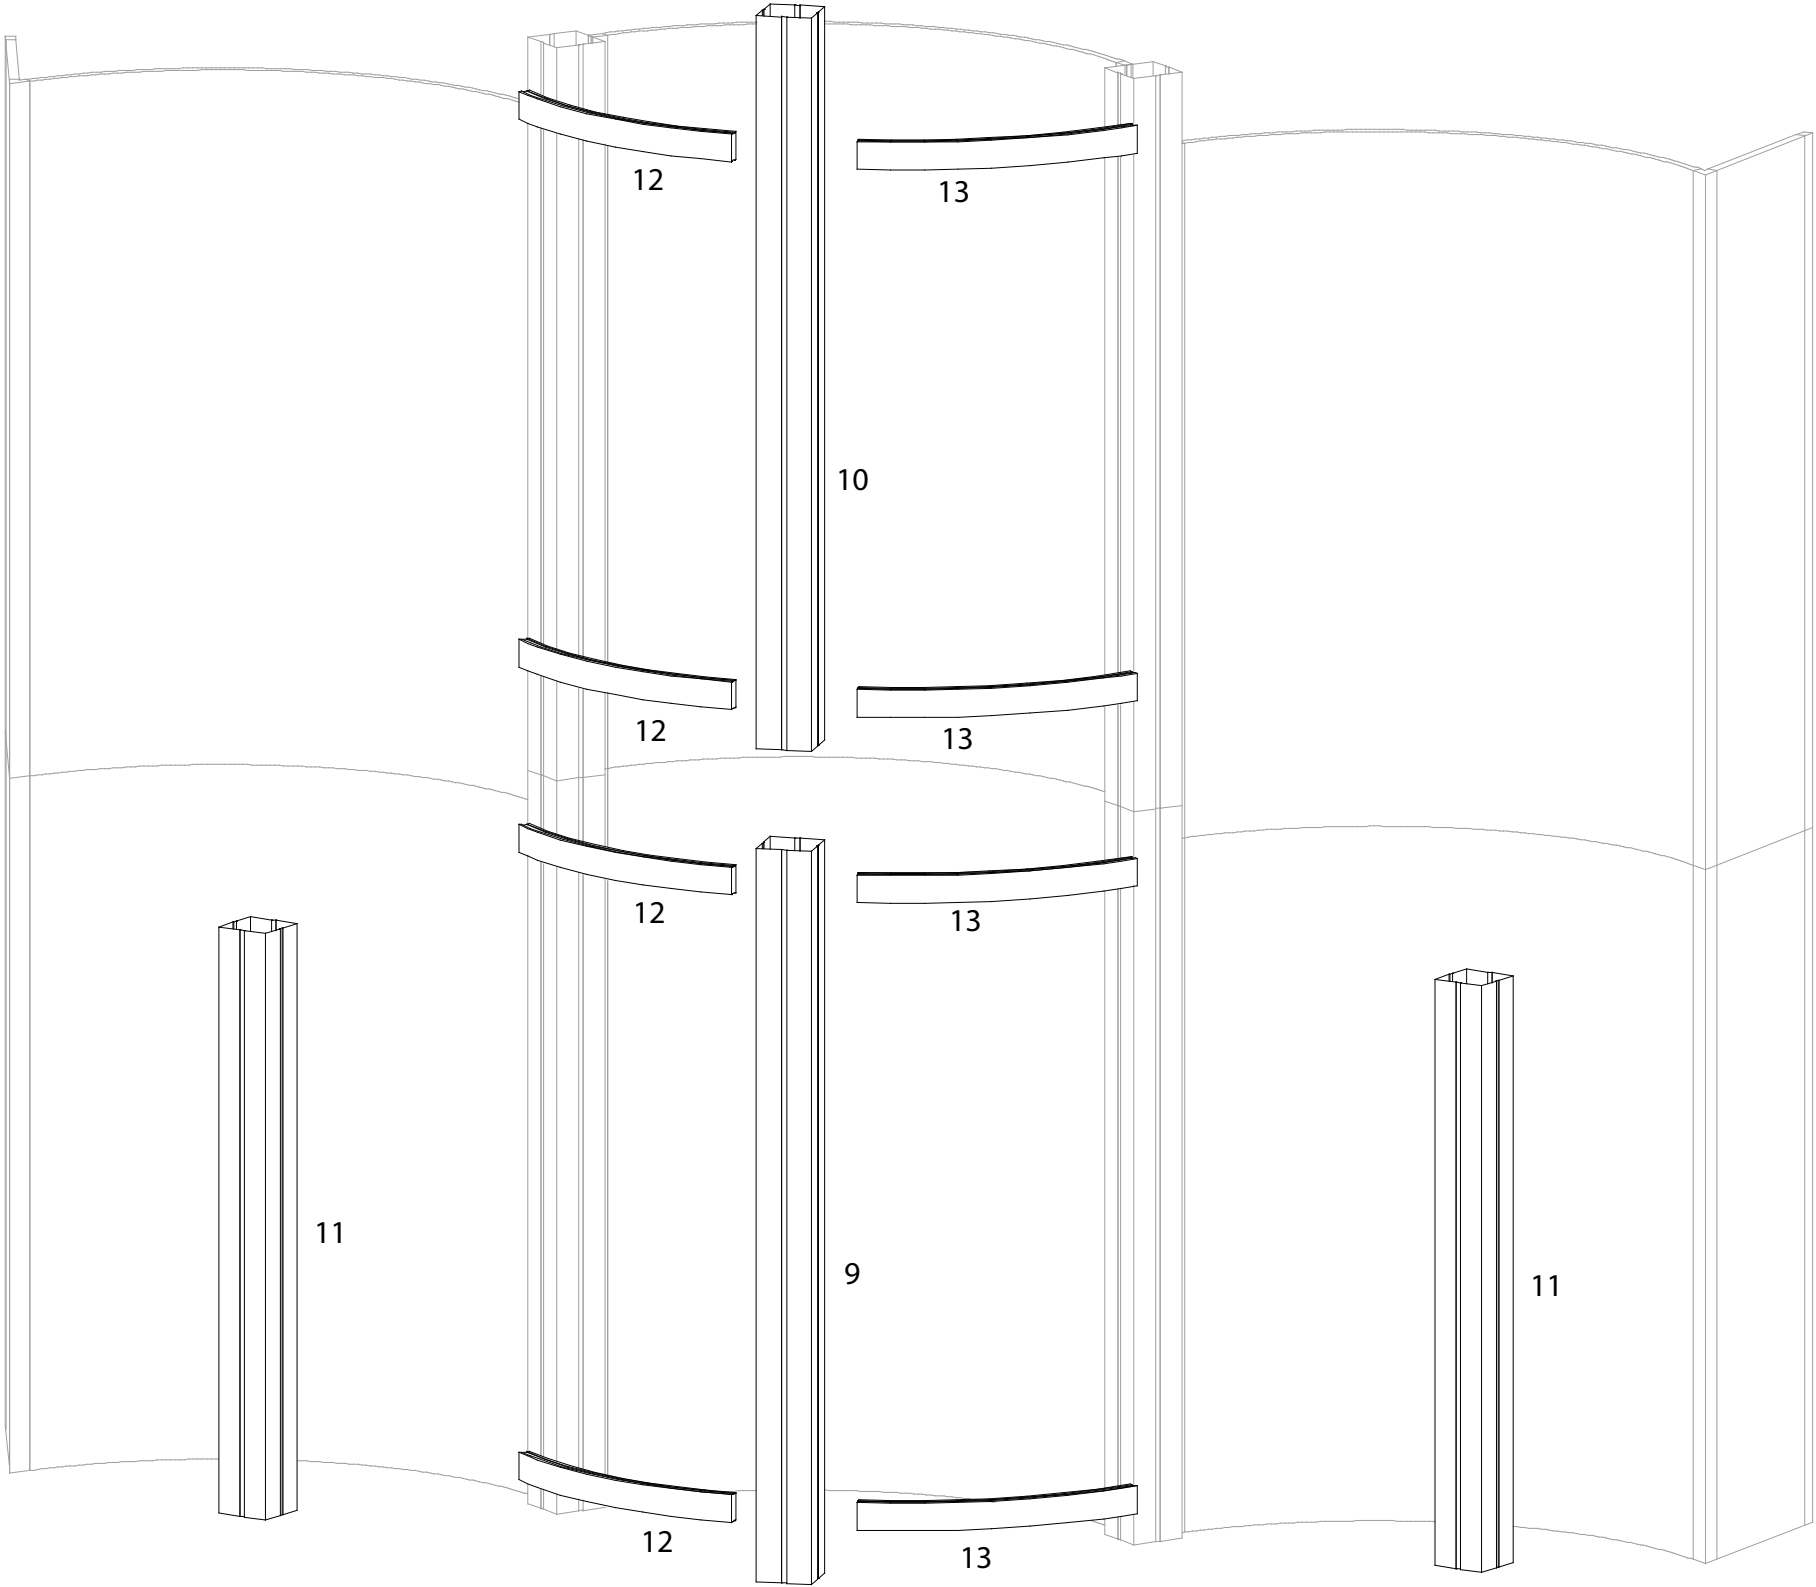

866.652.2100

Place and attach Custom Headers to Backwall
as shown at right.

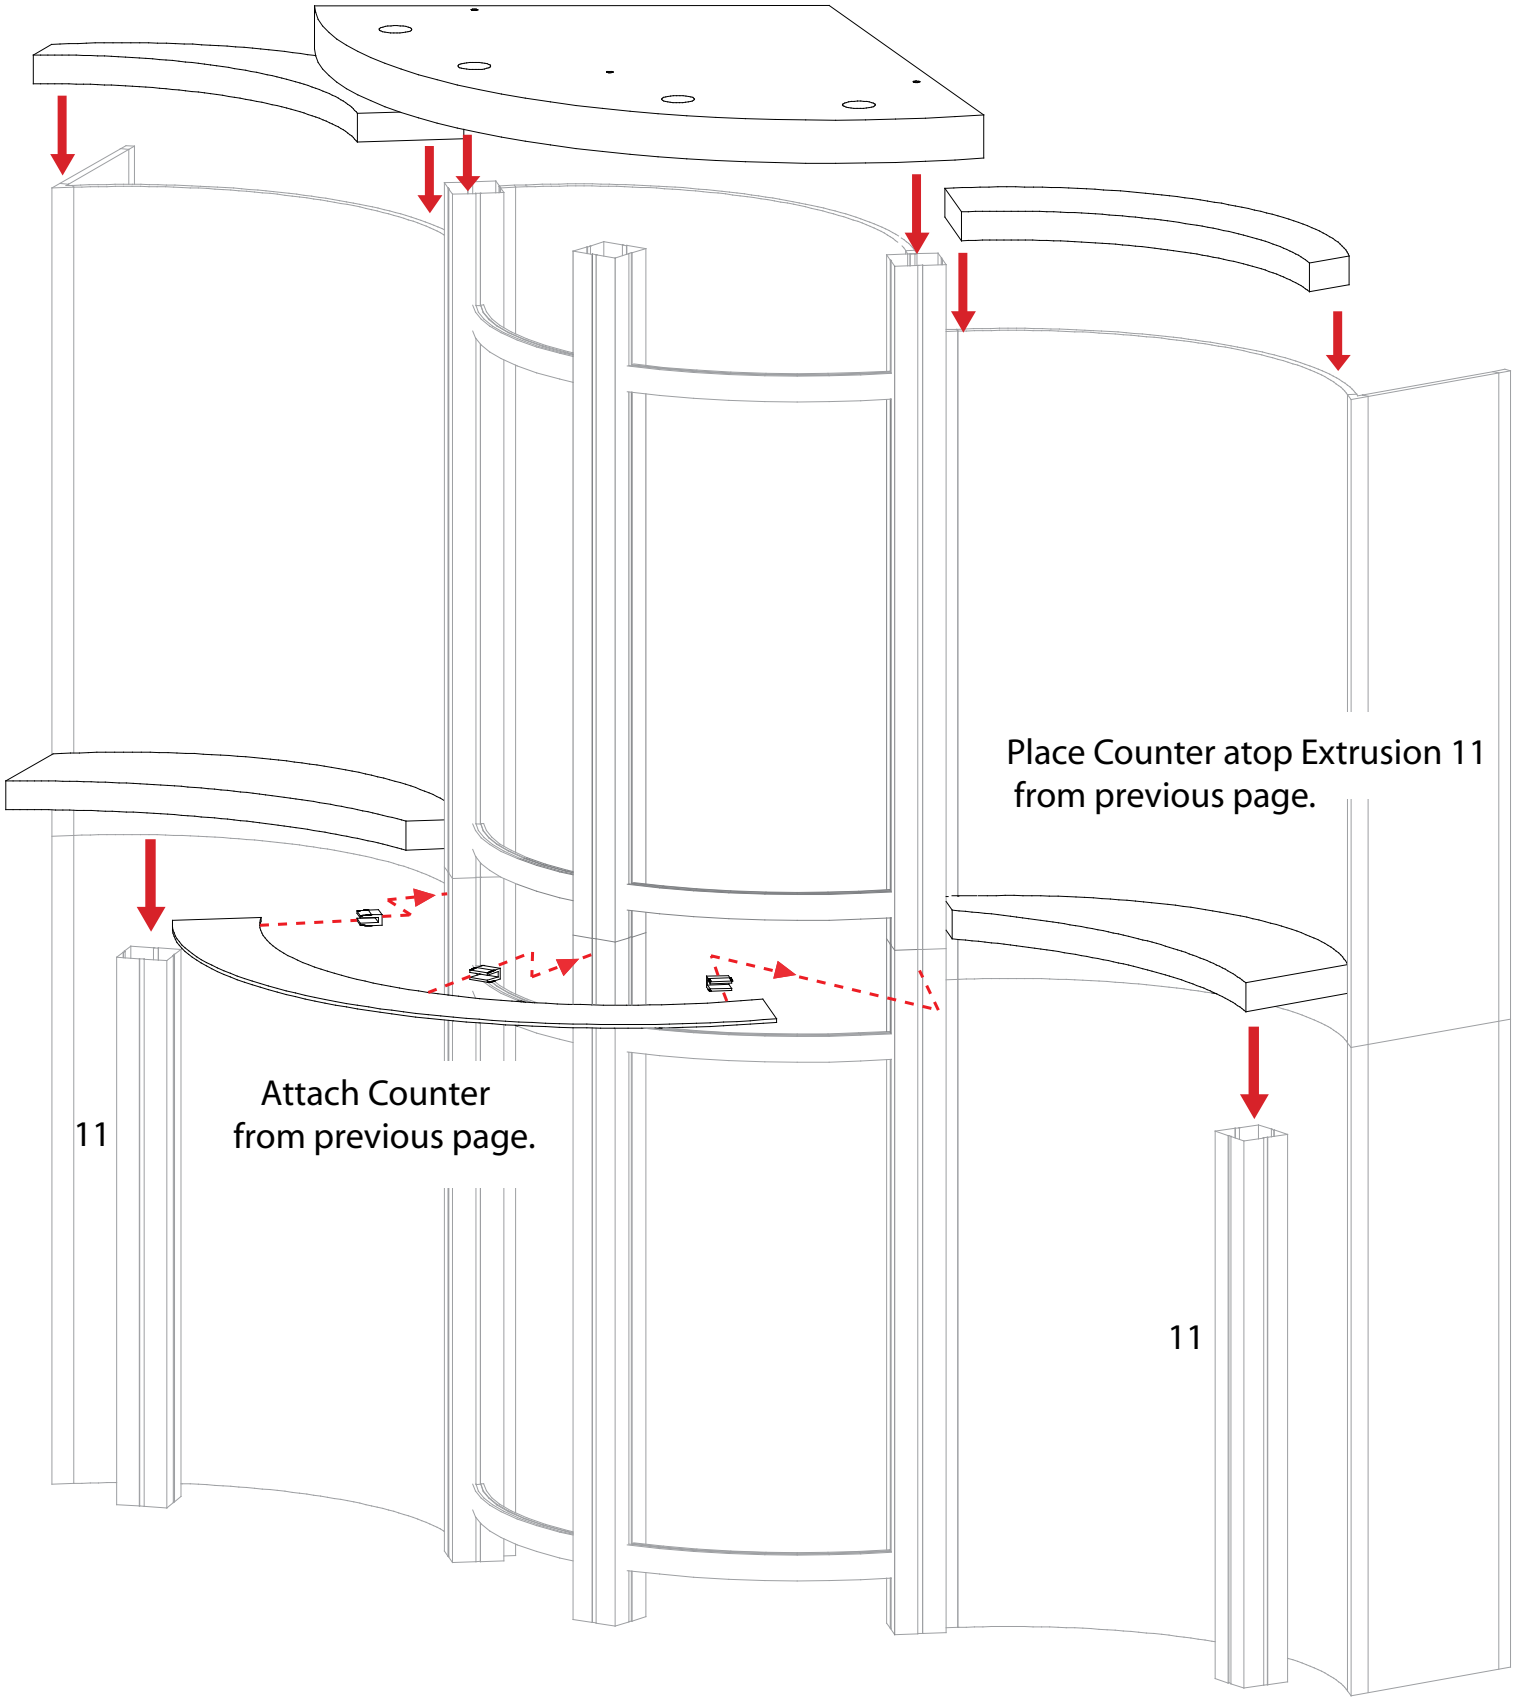



Place Counter atop Extrusion 11
from previous page.

Attach Counter
from previous page.

11

11

866.652.2100

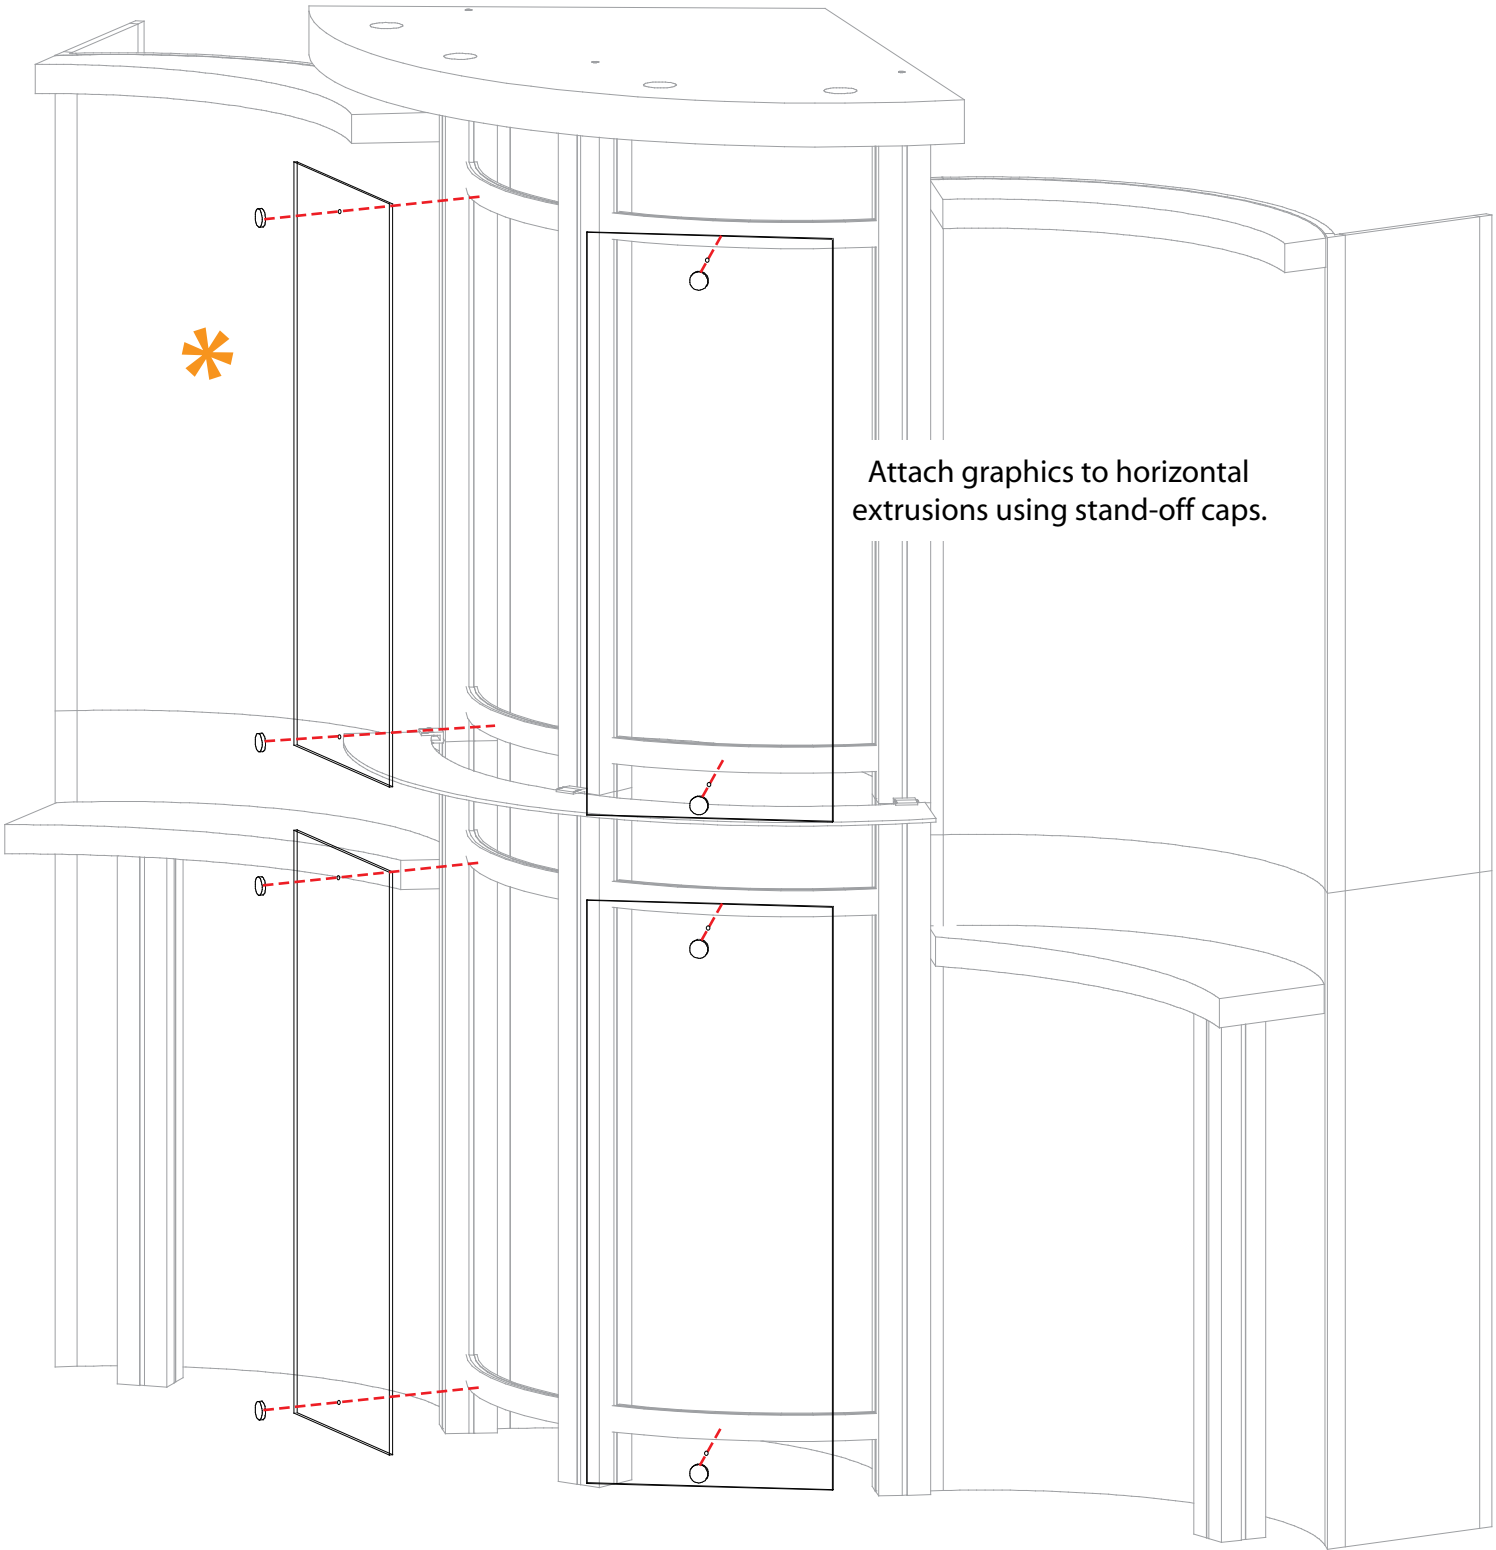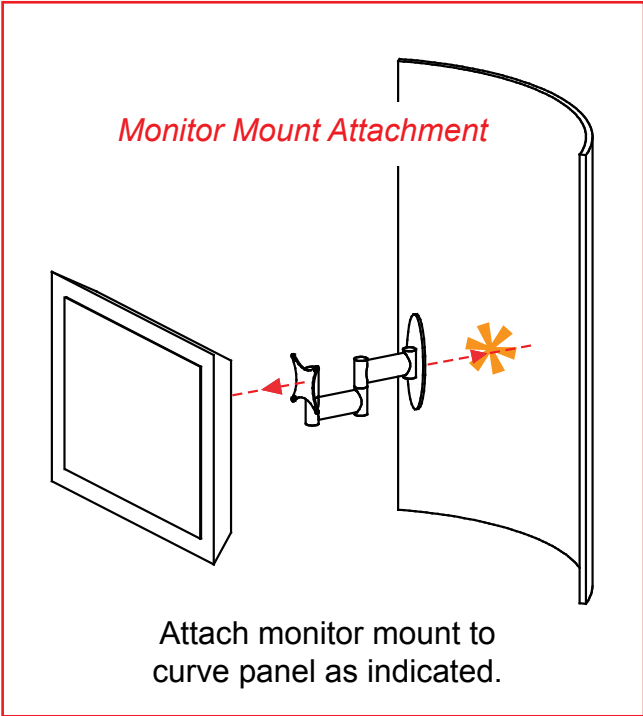

866.652.2100


| Part Number | Qty for Step | Description |
|-------------|--------------|--|
| 1 | 2 | 42"h Vertical Extrusion |
| 2 | 1 | 42"h Vertical Extrusion w/ Door Stop |
| 3 | 1 | 40.5"h Vertical Extrusion w/ Door Hinges |
| 4 | 1 | 20.09"w Curved Horizontal Extrusion |
| 5 | 1 | 20.09"w Curved Horizontal Extrusion |
| 6 | 1 | 20.09"w Curved Horizontal Extrusion |
| 7 | 1 | 20.09"w Curved Horizontal Extrusion |
| 8 | 1 | 20.09"w Curved Horizontal Extrusion |
| 9 | 1 | 20.09"w Curved Horizontal Extrusion |
| 10 | 1 | 20.09"w Curved Horizontal Extrusion |
| 11 | 1 | 20.09"w Curved Horizontal Extrusion |

Steps:


- 1) Connect horizontal extrusions [4, 5, 6 and 7] between vertical extrusions [1, 2 and 3] where indicated.
- 2) Place inserts and attach door where indicated.
- 3) Connect upper horizontal extrusions [8, 9, 10 and 11] between vertical extrusions [1, 2 and 3].
- 4) Velcro internal shelf supports to inside of assembled base.
- 5) Set internal shelf and counter top as shown.
- 6) Attach Plex shelves to pedestal using A10 clamps, see Shelf Attachment details.

Shelf Attachment


Slide A10 Clamp into groove of square extrusion.

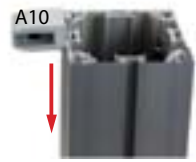


When desired location is found, tighten set screw to secure.




Tighten black plastic set screw to secure Shelf in place.



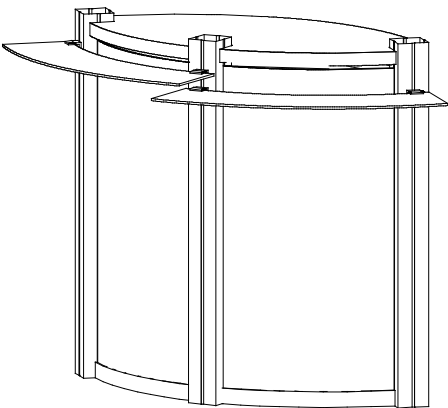


Door Attachment

Slide pin into hinge attached to vertical. Slide door hinge atop pin.

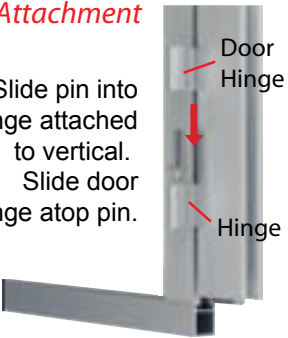

Extrusion Orientation

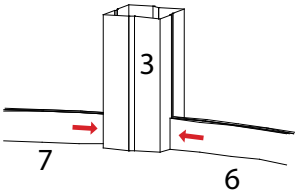

Arrows must point toward center vertical as shown.

